


PiCGENIE¹²³®



INSTRUCTIONS-OPTION 1


1

MAKE PILOT HOLE

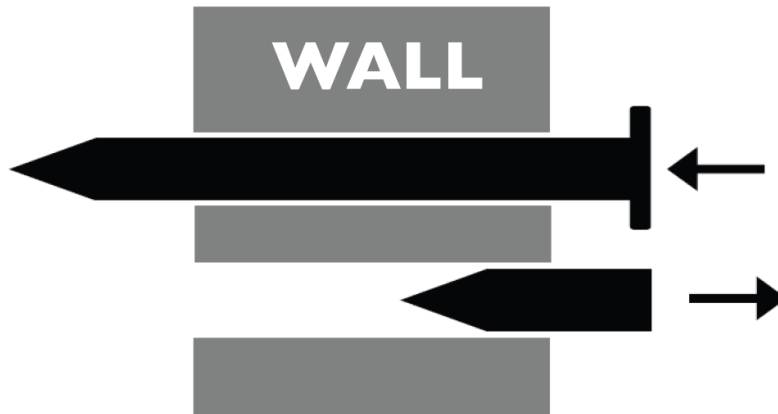

2

SCREW IN TIGHT

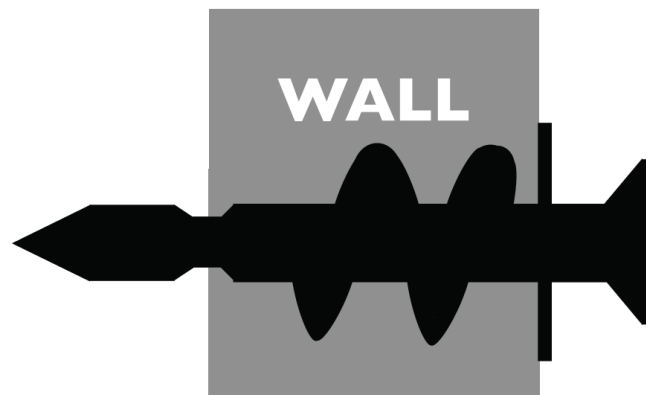

NOTE: Use a Phillips screwdriver to screw Atomic Anchors into Drywall wall.
Our 50# 4-Pack kit includes large diameter nails to use for this procedure.

PiCGENIE¹²³®

Picture Hanging Made Easy!