


PiCGENIE¹²³®

HANGING PICTURES ON CONCRETE WALLS

- (1) Attach two Accu-Hanger brackets. This procedure will require you to use our 50 lb 4-pack kit, which has the large diameter nails in it.
- (2) Fold up a sheet of copy paper as shown and tape to wall where you'll be making the marks..
- (3) Position and level your picture on the wall, then push to make marks on the masking tape/pad of paper.
- (4) Using a steel center punch, position point on punch in marks to make indentations in concrete wall. With the pads of paper still taped in place and after making indentations in concrete wall, drill a 1/8" diameter hole, using a masonry drill bit, straight into the wall. Drill it 1 1/4" deep. Remove paper pads. Squeeze white school glue into the holes and insert nails into holes leaving the heads out 1/8".
- (5) Remove marking tabs bending slightly down and then up to break off tabs.
- (6) Hang your picture. Push the top of frame against the wall flush and that's it.

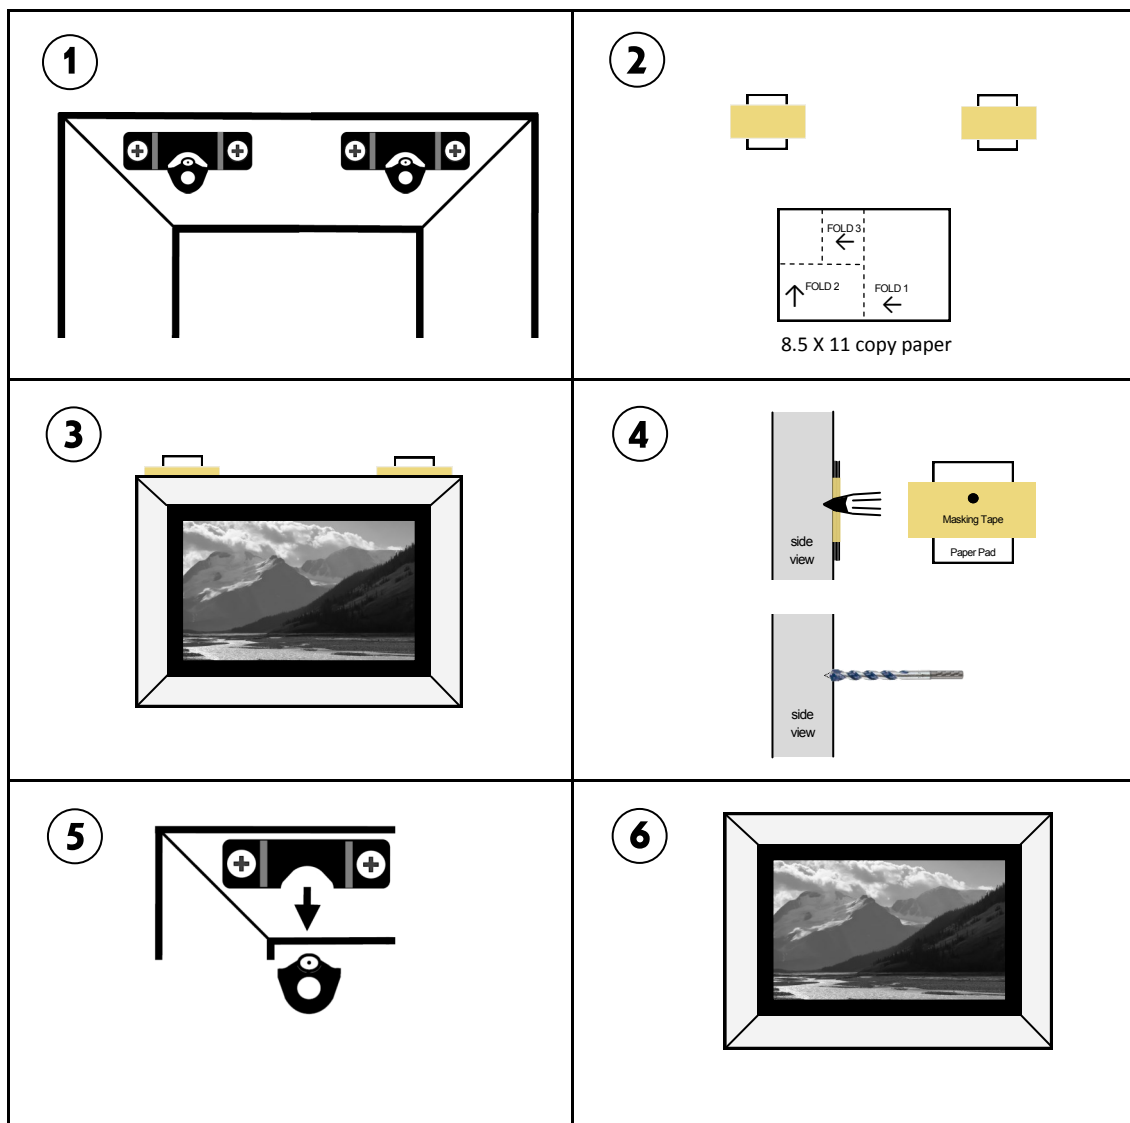

PiCGENIE¹²³®

Picture Hanging Made Easy!